


# C-VS-1508-INSE INSTALLATION INSTRUCTIONS

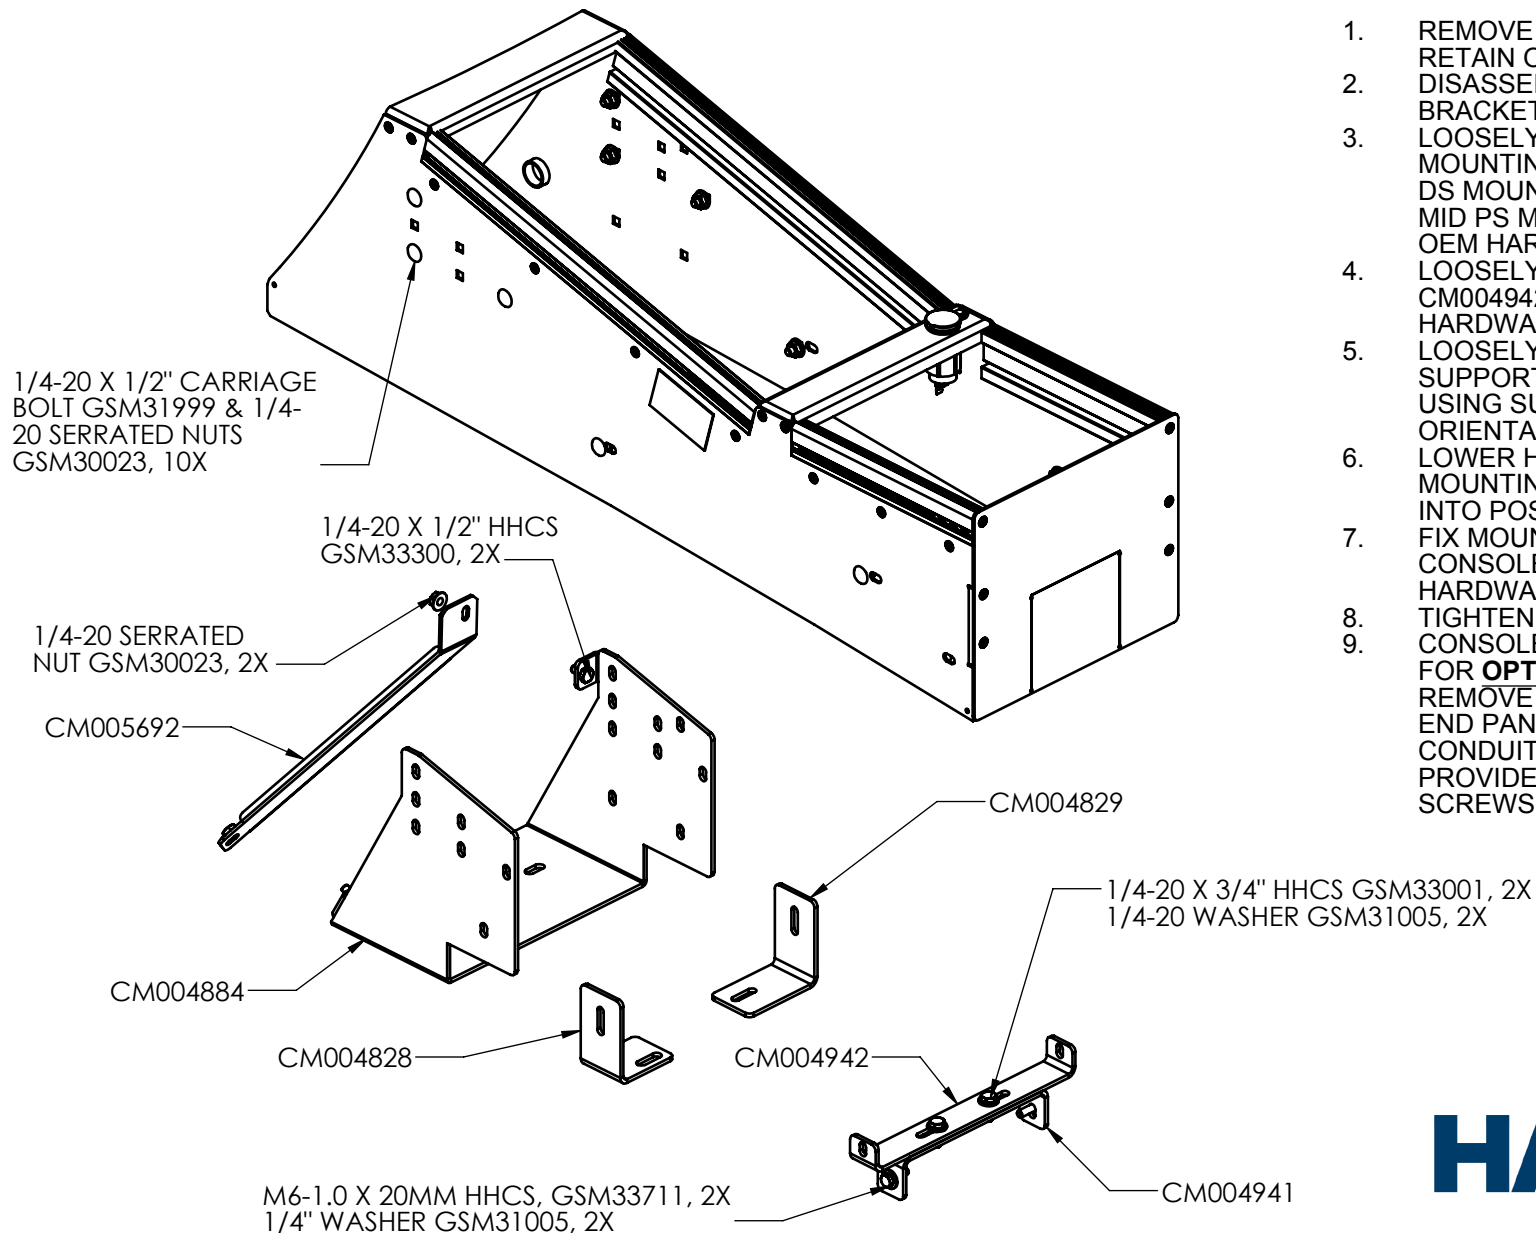

1. REMOVE OEM TUNNEL PLATE. RETAIN OEM HARDWARE.
2. DISASSEMBLE FRONT MOUNTING BRACKET CM004884 FROM CONSOLE.
3. LOOSELY ATTACH CM004884 FRONT MOUNTING BRACKET, CM004828 MID DS MOUNTING BRACKET & CM004829 MID PS MOUNTING BRACKET USING OEM HARDWARE.
4. LOOSELY ATTACH CM004941 & CM004942 USING SUPPLIED HARDWARE.
5. LOOSELY ATTACH CM005692 SUPPORT BRACKET TO CM004884 USING SUPPLIED HARDWARE IN THE ORIENTATION SHOWN.
6. LOWER HAVIS CONSOLE OVER MOUNTING BRACKETS AND SLIDE INTO POSITION.
7. FIX MOUNTING BRACKETS TO CONSOLE USING SUPPLIED HARDWARE.
8. TIGHTEN ALL HARDWARE.
9. CONSOLE INCLUDES PROVISIONS FOR **OPTIONAL** OEM REAR CONDUIT. REMOVE SQUARE KNOCKOUT FROM END PANEL, PLACE CONSOLE OVER CONDUIT, ATTACH WITH SPACERS PROVIDED AND OEM REAR BRACKET SCREWS.